


QUICK OPERATION GUIDE

1. Live mode

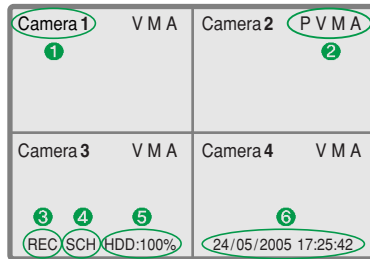

- ❶ Camera Title
- ❷ Alarm Display
 - P : Power Loss V : Video Loss
 - M : Motion Detection A : Alarm
- ❸ Recording Status Display
 - REC (Red color)** : Manual Recording
 - REC (Green color)** : Schedule Recording
 - REC (Yellow color)** : Event(Alarm or Motion Detection) Recording
- ❹ SCH: Schedule Recording Mode
- ❺ Storage Usage
- ❻ Current Date & Time

2. Display switching

- 1) **1 channel display:** Press numeric (1, 2, 3, 4) button
- 2) **4 channel display:**
Press and hold button and press (left arrow) button
- 3) **Start sequence mode:**
Press and hold button and press (left arrow) button

3. Status show or hide

Press and hold button and press (right arrow) button

4. Alarm display clear

Press button to clear Alarm display (P, V, M, A)

5. Configuration file upload or download via CF

- 1) Upload: Press and hold button and press (up arrow) button at live display
- 2) Download: Press and hold button and press (down arrow) button at live display

6. Recording start or stop: Press (record) button (toggle)

7. Entering the main menu: Press (menu/enter) button


8. Default password

There is no password at factory default.







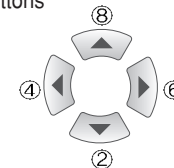




Just press (menu/enter) button again when password pop-up window is displayed

9. Password setup

- The password can be set only by arrow buttons
- To connect to the DVR over the network, the arrow combination password should be entered as numbers
- Arrow buttons correspond to numeric buttons on a computer keyboard



10. Navigating the menu

- 1) To activate the selection: Press  (menu/enter) button
- 2) Selection control in the menu:  (up)  (down)  (left)  (right)
- 3) To change the number setting like time or IP address:
Press  (up) or  (down)
To speed up, press and hold  and press  (up)  (down)
- 4) Press  button for returning to the previous mode









11. Exit from the menu: Press button

- 1) To jump to the LIVE mode immediately from anywhere in the menu:
Press and hold  and press  button

12. Entering the search menu

- 1) Press  (search) button
- 2) To view the next page: Press  (enter/menu) button

13. Playback control


Playback, Fast Forward	Press  (right) button (toggle)
Fast Rev, Reverse	Press  (left) button (toggle)
Pause	Press  (enter/menu) button
Step  or 	Once paused, press  (left),  (right) button
To cancel Pause	Press  (enter/menu) button



14. Audio indicator in playback: S (Recorded with audio)

15. Instant backup to CF or SD card


The instant backup sequence is:

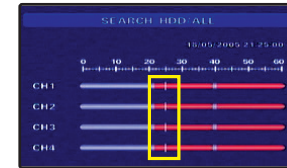

- 1) Select backup start time at "DAY/HOUR/MINUTE SEARCH SCREEN",



Press and hold  and press  (left) button

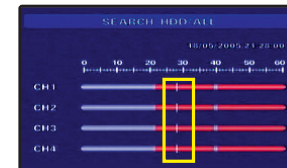- 2) Select backup end time at "DAY/HOUR/MINUTE SEARCH SCREEN",



Press and hold  and press  (right) button

- 3) Then, press and hold  and press  button to enter the backup menu

16. Event data backup to CF card without Monitor

(Copies the latest event data to CF)

Press and hold  and press  button at live display